



# 4500 EXTERNAL LINKAGE ASSEMBLY INSTRUCTIONS

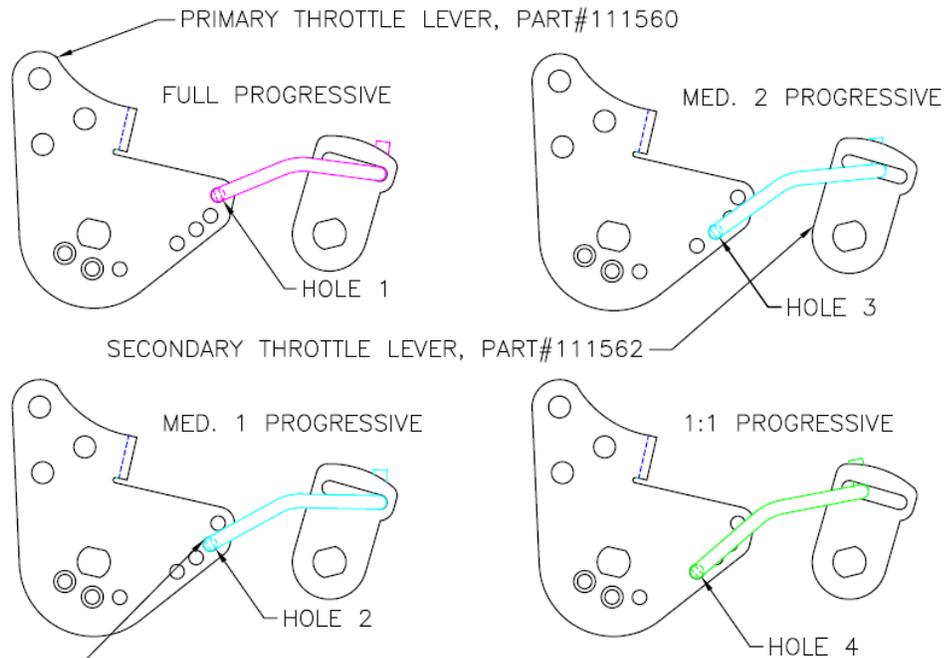


INSTALL SUPPLIED FLAT WASHER AND COTTER PIN ON THE BACKSIDE OF THE PRIMARY THROTTLE LEVER


BEND SLIGHTLY IN THIS AREA FOR FINE TUNING OF THROTTLE OPENINGS



FULL PROGRESSIVE LINK  
PART #43701



MED. PROGRESSIVE LINK  
PART #43702



1:1 PROGRESSIVE LINK  
PART #43703



1-270-793-0900